

 
QUICK GUIDE REFERENCE CARD

(Using the IQ2020® remote control with Moonlight™ Music System)

Moonlight Music System Start-Up from Spa Power-Up

IMPORTANT: Verify iCast™ transmitter inside your house has power, has a music source and the music source is playing music.

Default Screen

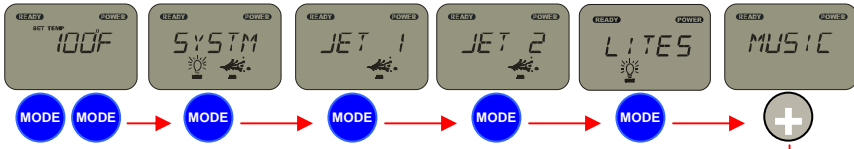

Default Settings at Spa Power-Up

 
 
 
 
 
 


* PWR + indicates power is ON.
PWR - indicates power is OFF

***IMPORTANT:** Ten seconds is required during power activation to allow the system to preset the default settings for Volume, EQ, and SRC.

Moonlight Music System System Control

Default Screen

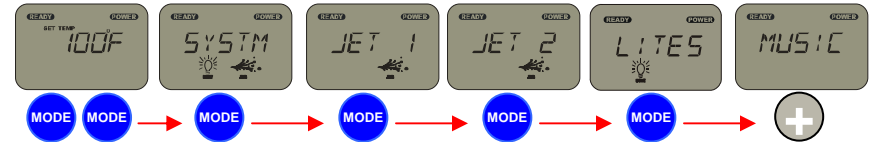

Press the + button to turn music system ON (system will take 10 seconds to turn on)
Press the - button to turn music system OFF

Press + or - button to increase or decrease the volume from 1-40.
No number indicates Volume is OFF

 
Equalizer boost. Press + to turn on and - to turn off.

SRC screen must be on SRC 3 for system to function. Press + or - to move through SRC screens.

NOTE: The last Volume and EQ settings used prior to powering down the music system will be the new default settings used when the music system powers up.

Moonlight™ Music System - iCast™ Menu

Default Screen

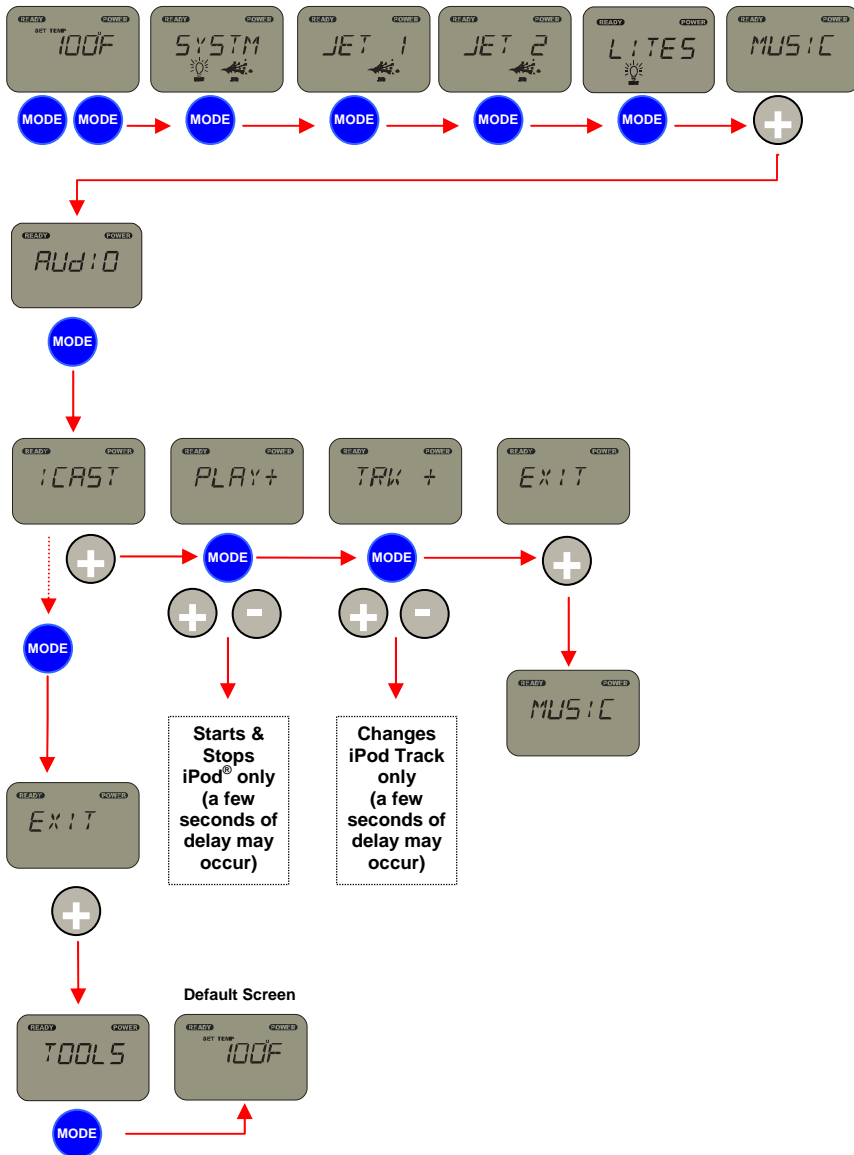

P/N 62577a (7/07)



moonlight™

music system



IQ 2020® Remote Quick Reference Guide